



CORAVIN™

INSTRUCTIONS FOR CLEANING YOUR CORAVIN™ SYSTEM



- We recommend that you regularly clean your Coravin System to achieve an optimal experience when using it.
- Do not fully submerge your Coravin System or place in dishwasher
- Never press the trigger while rinsing the spout, this may damage your unit.
- Occasionally, rinse your Coravin System with vinegar and water.

1. Place the spout of the Coravin System under a small stream of warm water to rinse. Allow water to flow out of the needle.

Do not press the trigger while rinsing the spout.

2. Press the trigger to release a short burst of gas to clear any excess water from the system.

3. Dry with a soft cloth to remove the droplets that may be left on your Coravin System.

4. Your Coravin System is now ready to use



Questions? Please view our instructional videos on coravin.com or call Customer Service at 855-692-6728.